

Explanation of general view

1 Compressor air output per minute	15 Adjustfit	28 Nail driven too deep will cause deformation of workpieces
2 Nailing frequency (times/min.)	16 Change plate	29 Nail length
3 Adjuster	17 Arrow	30 Wood thickness
4 Shallow	18 Nail guide	31 Concrete range 10 – 15 mm
5 Deep	19 Feeder	32 Exhaust cover
6 Too deep	20 Trigger	33 Small rod
7 Flush	21 Contact element	34 Screwdriver
8 Too shallow	22 Change lever	35 Cap
9 Hook	23 0.7 mm or less thick for steel plate	36 Drain cock
10 Hole	24 Thickness of workpiece	37 Air filter
11 Protrusion	25 10 mm or more	38 Oiler
12 Nose adapter	26 C-shaped steel (Thickness 1.6 mm – 2.3 mm)	39 Pneumatic oil
13 Lever	27 Nail driven to a proper depth	
14 Door		

SPECIFICATIONS

Model	AN620H
Air pressure	0.98 – 2.26 MPa (9.8 – 22.6 bar)
Nail length	Wire-collated coil nail 45 mm – 65 mm Sheet-collated coil nail 38 mm – 65 mm
Nail capacity	Wire-collated coil nail 250 pcs, 300 pcs Sheet-collated coil nail 200 pcs
Min. hose diameter	5.0 mm
Dimensions (L x H x W)	282 mm x 277 mm x 136 mm
Net weight	1.8 kg

- Due to our continuing program of research and development, the specifications herein are subject to change without notice.
- Specifications may differ from country to country.
- Weight according to EPTA-Procedure 01/2003

Intended use

The tool is intended for the preliminary interior work such as fixing floor joists or common rafters and framing work in 2" x 4" housing.

ENB109-2

IMPORTANT SAFETY INSTRUCTIONS

WARNING:

WHEN USING THIS TOOL, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF PERSONAL INJURY, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS.

- For personal safety and proper operation and maintenance of the tool, read this instruction manual before using the tool.
- Always wear safety glasses to protect your eyes from dust or nail injury.


WARNING:

It is an employer's responsibility to enforce the use of safety eye protection equipment by the tool operators and by other persons in the immediate working area.

- For Australia and New Zealand only
Always wear safety glasses and face shield to protect your eyes from dust or nail injury. The safety glasses and the face shield should conform with the requirements of AS/NZS 1336.

WARNING:

It is an employer's responsibility to enforce the use of safety eye protection equipment by the tool operators and by other persons in the immediate working area.

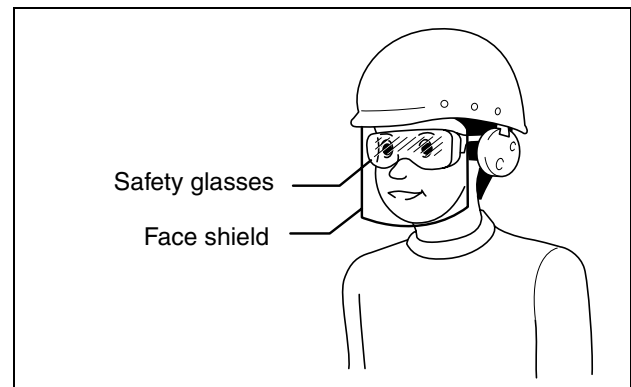

- Wear hearing protection to protect your ears against exhaust noise and head protection. Also wear light but not loose clothing. Sleeves should be buttoned or rolled up. No necktie should be worn.
- Rushing the job or forcing the tool is dangerous. Handle the tool carefully. Do not operate when under the influence of alcohol, drugs or the like.